


FOR SERIES 2 ATTACHMENTS

STALL FLUSH TYPE INSTALLATION




WRENCH TIP HEX CHART FOR
BREAK-AWAY FRANGIBLE COLLARS
FLUSH (NO SOCKET)

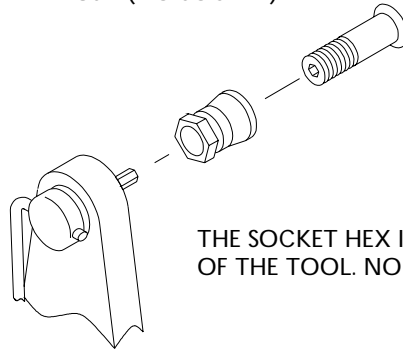

THE SOCKET HEX IS BUILT INTO THE GEAR
OF THE TOOL. NO SOCKET IS USED

JIFFY TIP

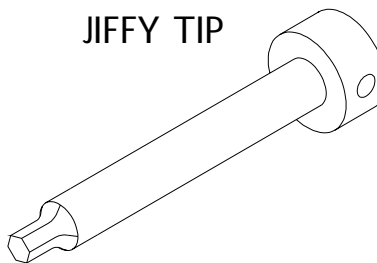

SOLID ONE PIECE

SERIES 2 FLUSH				
PIN HEX	1/16	5/64	3/32	1/8
JIFFY TIP STALL	14490	14489	14491	13657